

LAGAN



Design and Quality
IKEA of Sweden



ENGLISH

Please refer to the last page of this manual for the full list of IKEA appointed After Sales Service Provider and relative national phone numbers.

The electronic user manual is available at www.ikea.com.

中文

请参阅本手册最后一页，以获取宜家指定的售后服务提供商的完整列表以及相关国家的电话号码。

电子用户手册可在 www.ikea.com 上获取。

ENGLISH
中文

5
26

TABLE OF CONTENTS

Safety Warning	5	Installation and connection	19
Product description	12	Environmental concerns	19
Control panel	13	Ikea guarantee	20
Using the microwave oven	14	China RoHS	21
Trouble shooting	18	Environmental List	22
Specifications	18		

Safety Warning

Important Safety Instructions

- Please read carefully and keep for future reference.
- During use, ensure that the power plug of the household appliance is fully inserted into the power outlet and maintains good contact.
- When an extension cord power outlet is required, use one that meets national standards.
- When personnel leave the area, please disconnect the power.
- If the product produces abnormal noise, odor, high temperature, or malfunctions, immediately stop using it, turn off the switch, and disconnect the power.
- ⚠ Warning: Power should not be supplied to household appliances from a lamp head with a socket.
- ⚠ Warning: The total rated current of household appliances connected to the extension cord power outlet should not exceed the rated current of the original fixed outlet or circuit.
- ⚠ Warning: This product should not be used near flammable or explosive materials or in similar environments.
- ⚠ Warning: Users should not disassemble household appliances themselves and should not modify internal wiring, components, and protective devices.
- ⚠ Warning: When removing the plug from the outlet, do not pull on the power cord.
- ⚠ Warning: Users should not replace the fuses in household appliances and power supplies with ordinary conductors or fuses exceeding the specified current capacity.
- ⚠ Warning: Users should not alter the settings of low-voltage circuit breakers or
- Precautions must be taken during the user's maintenance and care:
 - ✘ Clean the product after it has cooled.
The microwave oven should be cleaned regularly and all food residues removed. Not cleaning the microwave oven can lead to surface degradation of the appliance, affecting its lifespan and potentially causing hazardous situations.
 - ✘ The product's exterior can be wiped with a cloth dampened with a mild detergent (such as dish soap), then wiped clean with a damp cloth, and finally dried with a dry cloth. Never use steel brushes or other hard objects to clean the product. Do not clean the oven door safety lock system.
 - ✘ Keep the bottom of the oven cavity clean to avoid abnormal noise caused by the turntable during operation of the microwave oven.
 - ✘ The product has two types of waveguiding: side waveguiding and top waveguiding. For products with side waveguiding, there is a waveguide port on the right side of the cavity. Keep the waveguide port clean and do not remove the waveguide cover (mica sheet) to prevent arcing
 - ✘ Clean the door seal, cavity, and details of adjacent components; If the product has not been used for a long time, use the grilling function for a few minutes before use to evaporate any accumulated moisture inside the product. (Actual product features apply)
 - ✘ Keep the oven cavity bottom clean to avoid abnormal noise from the turntable during operation.

residual current devices themselves.
(Only applicable to microwave steam ovens with a turntable).

- This appliance is not intended for use by persons with physical, sensory, or mental disabilities, or lack of experience and knowledge, including children, unless they have been supervised or instructed by a person responsible for their safety concerning the use of the appliance
 - Children should be supervised to ensure that they do not play with this appliance.
 - This appliance can be used at altitudes up to 4000 meters.
 - This appliance contains a grounding connection which is used only for functional purposes. (Actual product features may vary)
 - If the power cord is damaged, to avoid danger, it must be replaced by the manufacturer, its service agency, or similarly qualified persons.
- ⚠ Warning: If the microwave oven door or door seal is damaged, do not use it until it has been repaired by a qualified service person.
- ⚠ Warning: Maintenance operations other than those described in the user manual are to be performed only by qualified service personnel, including the replacement of the cover designed to prevent microwave leakage, which can be dangerous.
- ⚠ Warning: Do not heat liquids or other foods in sealed containers, as this could cause an explosion.
- The appliance is intended for household and similar use, such as:
 - ✖ In staff kitchens in shops, offices, and other working environments;
 - ✖ Farms;
 - ✖ Hotels, motels, and other residential environments used by customers;
 - ✖ Budget hotels providing only bed and breakfast.
 - The minimum height required for free space above the top casing of the microwave oven.
 - Use only vessels suitable for use in the microwave oven.
 - Do not use metal containers when cooking food and beverages in the microwave oven. This requirement does not apply if the manufacturer specifies the dimensions and shape of metal containers suitable for microwave cooking.
 - When heating food in plastic or paper containers, monitor the microwave oven to prevent the possibility of a fire.
 - Use the microwave oven to heat food and beverages. Drying food or clothing, and heating warm pads, slippers, sponges, wet cloths, and similar items can pose a risk of injury, fire, or deflagration.
 - Be cautious of smoke.
If smoke is detected, turn off the appliance or unplug the power plug, and keep the oven door closed to suppress the spread of flames.
 - Microwaving beverages can cause delayed splattering and boiling, so handle with care when removing or placing them.
 - Food in baby bottles and baby food jars should be stirred or shaken, and the temperature of the food in the bottle should be checked before feeding to avoid burns.
 - Do not use the microwave oven to heat whole eggs in the shell or whole eggs that have already been cooked, as they may explode during or even after heating.
 - Clean the door seal, cavity, and details of adjacent parts.
 - Door Seal Cleaning
Wipe the door seal with a cloth dipped in an alkaline detergent (use a small brush dipped in toothpaste to clean narrow crevices), then wipe clean with a damp cloth, and finally dry with a dry cloth.
 - It is recommended to clean the microwave oven regularly and remove all food residues.
 - Not cleaning the microwave oven can lead to the deterioration of the appliance's surface, affecting its lifespan, and may also result in dangerous situations.
 - This microwave oven can only use the temperature probe recommended for this microwave oven. (Based on actual product features)
 - For fixed and built-in appliances with removable turntables used at a height of

900mm or higher from the ground, the instructions should indicate that when removing containers from the appliance, care should be taken not to pull out the turntable.

- This requirement does not apply to appliances with horizontally hinged bottom doors. (Subject to actual product functions) Do not use the steam cleaner to clean appliances.
- The microwave oven is designed for built-in use or placement in a cabinet.
- The manufacturer should provide the minimum dimensions for the cabinet (refer to technical specifications and installation instructions), and the user manual should indicate that all cabinet doors should be open when the appliance is operating.
- The microwave oven is equipped with an additional decorative door, which should be open when the appliance is operating. (Subject to actual product functions)

⚠ Warning: When the appliance operates in combination mode, due to the high temperatures generated, children should use it under adult supervision.

- The appliance will heat up during use. Be careful to avoid contact with the heating elements inside the oven.

⚠ Warning: Some parts may become hot during use. Keep children away.

- Do not clean the glass on the oven door with abrasive cleaners or sharp metal scrapers, as this can scratch the glass surface and lead to breakage.

⚠ Warning: To avoid the risk of electric shock, ensure the appliance is disconnected from the power supply before replacing the light.

- The steam cleaner must not be used. Use only the temperature sensing probe recommended for this oven. (Refer to the actual product features)

⚠ Warning: After the appliance has been used, the heating element and cavity may still be hot. Avoid touching the inside of the cavity to prevent burns.

⚠ Warning: Only allow children to use the microwave oven unsupervised when they have been given adequate instruction to use it safely and understand that

improper use can be dangerous.

⚠ Warning: Parts that can be touched during use may become hot. Children should stay away, as some surfaces may be very hot while the appliance is operating. Surfaces marked with the "High Temperature Surface" symbol will become hot during use.

- Place out of reach of children
Children should only be allowed to use the product unsupervised after they have been given adequate instruction to use it safely and understand the dangers of improper use. When the appliance operates in combination mode, due to temperature increase, children must use it under adult supervision.

- High Temperature Surface, Prevent Burns
The middle inner side of the handle may become hot; the appliance is disconnected from power.

- Appliances for the oven should not be installed behind decorative doors to prevent overheating.

- Clean surfaces that come into contact with food

✖ Fats produced during cooking can corrode the oven cavity, affecting heating efficiency and altering the taste of food. Therefore, clean the oven cavity promptly after use;

✖ Regularly clean the metal baking tray, ceramic dish, and metal grate with warm water. Note: After prolonged cooking in the microwave oven, do not clean immediately with cold water. (These are cleaning instructions; for specific details, refer to the documentation provided with the unit)

- Baby bottles and baby food jars should be shaken or stirred, and the temperature of the food inside should be checked before feeding to avoid burns.
- It must not be operated with an external timer or an independent remote control system.

⚠ Warning Incorrect use can cause potential injuries:

✖ Do not insert metal objects or foreign objects, such as wires or fingers, into the product's air intake, vents, or louvers, as this may lead to electric

shock and injury. If a foreign object is accidentally inserted into the product, unplug the power plug and contact our repair service center;

- ※ Do not place the power cord or plug near vents, outer covers, areas with excessively high temperatures, or damp locations to prevent the power cord from deteriorating and causing hazards;
- ※ After use, be sure to promptly unplug the power plug and do not place it near a heat source or submerge it in water;
- ※ Do not place the power cord and plug directly on the outer cover to prevent residual heat from damaging the power cord;
- ※ Do not unplug the plug during cooking. Unplugging the plug can cause sparks, fires, electric shocks, etc;
- ※ Do not fry food. Do not use the product to fry food to prevent fires.

⚠ Warning: Do not remove the outer cover or attempt to modify the appliance, as it contains high-voltage power sources.


⚠ Warning: Only qualified service personnel should perform maintenance operations. If you encounter any issues during use, please contact our customer service center for repairs.

- Do not insert any foreign objects into the interlock switch of the oven door.
- When cleaning, if the control settings are higher than those used during normal cooking, the surface temperature may be higher than usual. Keep children away.
- Delayed Cooling(Refer to the actual product function)
After cooking, the fan will continue to run to cool down the appliance. You can open the door to remove food, and the fan will stop automatically once cooling is complete. This is a normal operation and requires no further action.
- Cooling during the cooking process (Subject to the actual product function)
During the cooking process or when paused, the fan will continue to operate, which is a normal phenomenon. You can continue to complete the cooking at this time.

- Overheating should be avoided
The biggest feature of microwave products is speed. After starting the product, you must frequently monitor the cooking situation inside the oven to avoid overheating.
- Overheating can cause smoke or fire, and overheated containers may melt or crack. When heating food packaged in plastic or paper, observe the microwave oven carefully, as there is a risk of fire. Heating small amounts of food for extended periods, due to the heat not being sufficiently absorbed by the food, can cause the oven cavity to become abnormally hot, leading to burns. Therefore, do not touch the oven cavity after use.

SAVE THESE INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

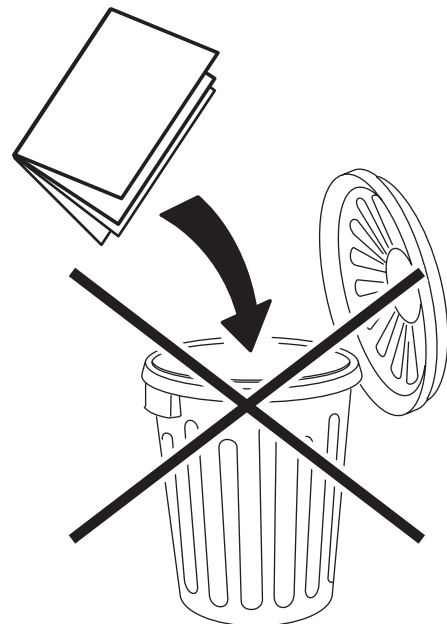

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

⚠ DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

⚠ WARNING!

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- If a long cord set or extension cord is used:
 - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - The extension cord must be a grounding-type 3-wire cord.
 - The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

- Clean the cavity of the oven after using with a slightly damp cloth.
- Clean the accessories in the usual way in soapy water.
- The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Cleaning Tip ★ For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

⚠ CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on **"MATERIALS YOU CAN USE IN MICROWAVE OVEN OR TO BE AVOIDED IN MICROWAVE OVEN."**

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

- Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
- Cook on maximum power for 1 minute.
- Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5 mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Thermometers Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metaltrimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed
Wood	Wood will dry out when used in the microwave oven and may split or crack.

Safety Precautions

⚠ Caution

- After cooking is complete, the system fan will continue to operate to facilitate cooling, which is a normal phenomenon.



Prohibit Microwave Operation Without Load

Do not start the machine without placing food inside to avoid the oven becoming abnormally hot, which may cause malfunction



Overheat Protection

Continuous use should not be excessively long to prevent the machine from entering an overheating protection state, which will stop the heating process.

 
The appliance can be used again after it has cooled down.



Socket Safety


For safety, the plug must be connected to a grounded socket; otherwise, there is a risk of electric shock.

Warm reminder

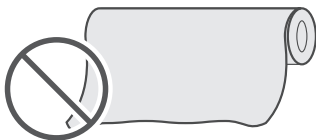


Do not use aluminum foil

 - Do not use under microwave function, I will spark and flair!

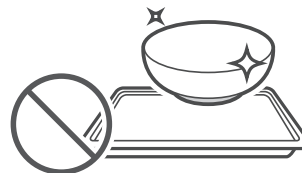


Do not use metal containers

 - Do not use under microwave function, I will spark and flair!

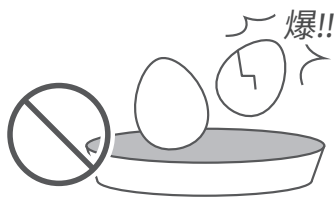


Do not heat foods in their shells

 - Heating sealed foods in the microwave can cause them to explode!

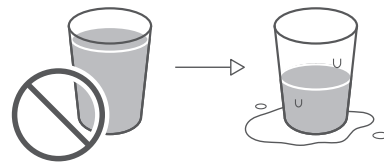

Capacity must not exceed 2/3

 - Do not heat liquids to more than 2/3 of the container, otherwise it may overflow.

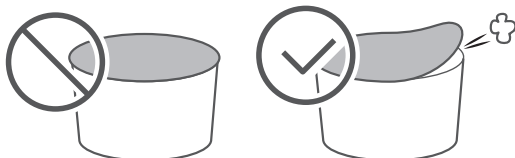

Leave an opening for sealed foods

- When heating sealed foods, leave an opening, or they might explode!


Product description

Setting up your oven

Name of oven parts and accessories


Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:

Glass tray	1x
Turntable ring assembly	1x
Instruction manual	1x
Drilling template	1x
Assembly instruction	1x

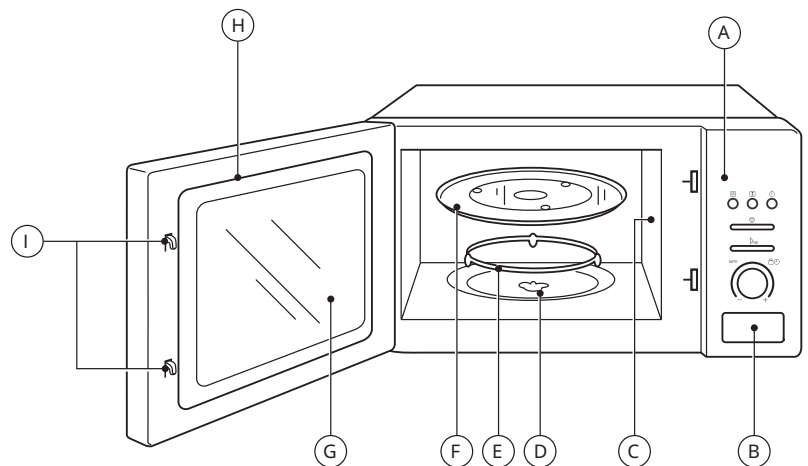 


- A) Control panel
- B) Door opening button
- C) Wave guide cover (Do not remove)
- D) Turntable shaft
- E) Turntable ring assembly
- F) Glass tray
- G) Observation window
- H) Door assembly
- I) Safety interlock system

 Turntable installation

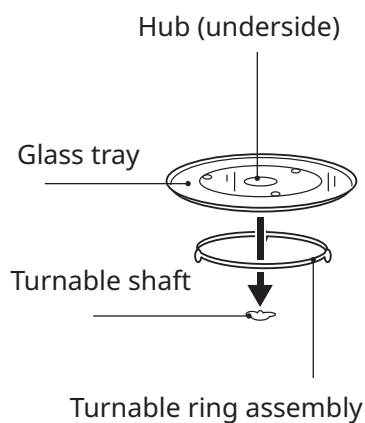

- a) Never place the glass tray upside down. The glass tray should never be restricted.
- b) Both glass tray and turntable ring assembly must always be used during cooking.
- c) All food and containers of food are always placed on the glass tray for cooking.
- d) If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.
- e) Never put frozen food directly on a warm turntable.

 Control panel

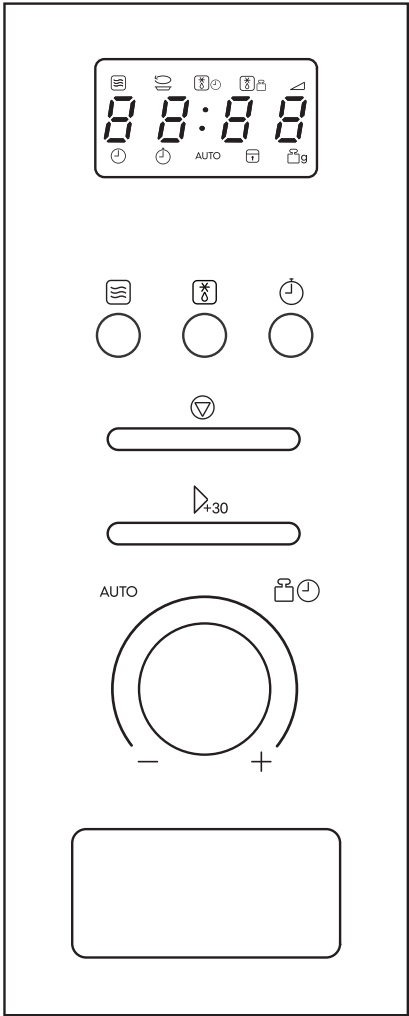


INSTRUCTION

-  Microwave
-  Kitchen timer/Clock
-  Start/+30 Sec/Confirm
-  Time
-  Weight/Time Defrost
-  Stop/Clear
-  Auto Menu

Using the microwave oven



Using the knob

 To use the selection knob, push it inwards and it will pop out.

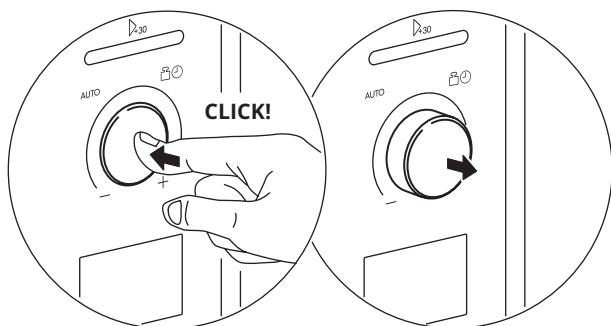

Open the door

  Push the button to open the door.

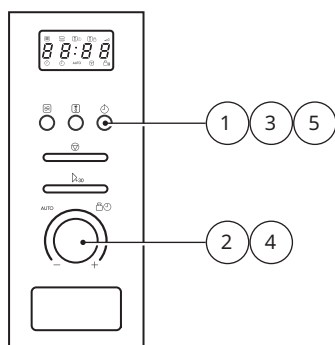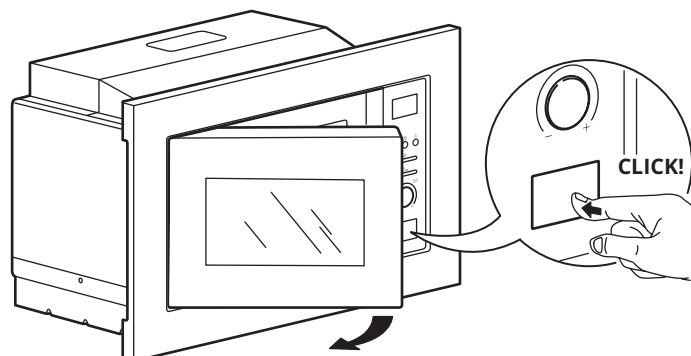

Clock setting

When the microwave oven is electrified, the screen will display "0:00", buzzer will ring once.


1. Press **Kitchen timer/Clock** twice to select clock function, the hour figures will flash.
2. Turn knob to adjust the hour figures, the input time should be within 0--23.
3. Press **Kitchen timer/Clock**, the minute figures will flash, the hour figures will light.
4. Turn knob to adjust the minute figures, the input time should be within 0--59.
5. Press **Kitchen timer/Clock** to finish clock setting, : will flash.

Note: During the process of clock setting, if you do not press **Kitchen timer/Clock** to confirm in 1 minute, the oven will go back to previous status automatically.

Lock-out function for children

Lock: In waiting state, press **Stop/Clear** for 3 seconds, there will be a long "beep" denoting entering the children-lock state and screen will display [] or current time.

Lock quitting: In locked state, press **Stop/Clear** for 3 seconds, there will be a long "beep" denoting that the lock is released.


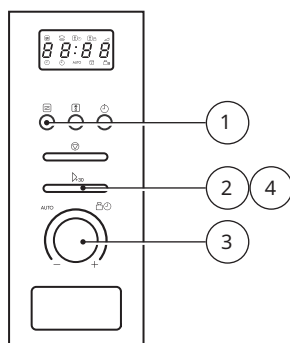


Microwave cooking

1. Press **Microwave** once, the screen will display 80 flickering. Press **Microwave** repeatedly or turn the knob to choose the power you want.
2. Then press **Start/+30 Sec** to confirm selected power level.
3. Turn knob to set cooking time from 0:05 to 95:00.
4. Press **Start/+30 Sec** again to start cooking.

Note: The time steps for the time when turning the knob are as follow:

0---1 min	: 5 seconds
1---5 min	: 10 seconds
5---10 min	: 30 seconds
10---30 min	: 1 minute
30---95 min	: 5 minutes

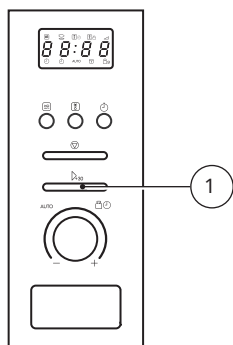
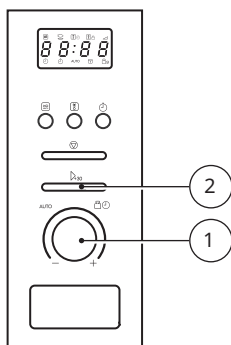
Quick start alternative 1**Quick start alternative 2****Quick start alternative 1**

1. In stand by mode, press **Start/+30 Sec** to start cooking with full power for 30 seconds, each added press will increase 30 seconds cooking time up to 95 minutes.

Quick start alternative 2

1. In stand by mode, turn the knob to the right to set the time.
2. Press **Start/+30 Sec** to start cooking at full microwave power.

  Note: In microwave or time defrost state, each press of **Start/+30 Sec** can increase 30 seconds of cooking time.

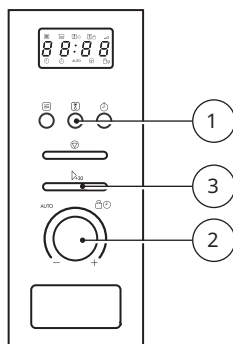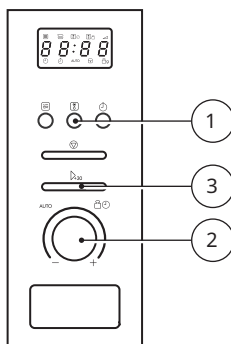Defrost by weight**Defrost by time****Defrost by weight**

1. Press **Weight/Time Defrost** once, and the oven will display **def1**.
2. Turn the knob to select the weight of food from 100 to 2000g.
3. Press **Start/+30 Sec** to start defrosting.

Defrost by time


1. Press **Weight/Time Defrost** twice, and the oven will display **def2**.
2. Turn the knob to select the defrost time. The MAX. time is 95 minutes.
3. Press **Start/+30 Sec** to start defrosting.


The product will prompt you to turn the food after half of the time set for defrosting. Open the door and turn the food, shut the door and press **Start/+30 Sec** to continue the defrosting.

Kitchen timer

1. Press **Kitchen timer/Clock** once, screen will display **00:00**, clock indicator will light.
2. Turn the knob to enter the correct time. (Maximum time to set is 95 minutes.)
3. Press **Start/+30 Sec** to confirm setting, clock indicator will be flickering.

When the kitchen time is reached, clock indicator will go out and the buzzer will ring 5 times.

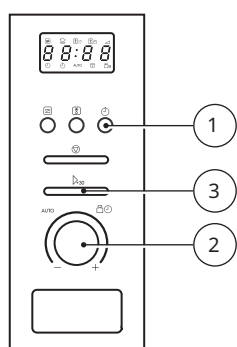

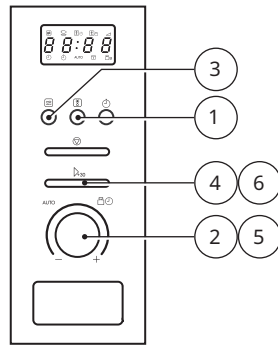


The product can be set to perform a multi stage cooking, defrosting followed by reheating:

Multi-section cooking


1. Press **Weight/Time Defrost** twice, and the oven will display **def2**.
2. Turn the knob to select the defrost time.
3. Press **Microwave** once, the screen will display **80**, repeatedly push the button or turn the knob to set the requested microwave power.
4. Press **Start/+30 Sec** to confirm power setting.
5. Turn the knob to select cooking time.
6. Press **Start/+30 Sec** to start cooking.

The product will prompt you to turn the food after half of the time set for defrosting. Open the door and turn the food, shut the door and press **Start/+30 Sec** to continue the defrosting. The buzzer will sound once again entering the second cooking. When cooking finishes, buzzer sound five times.

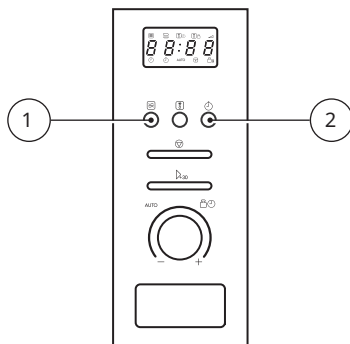

Inquiring function

1. In state of microwave cooking, press **Microwave**, the current power will be displayed for 3 seconds.
2. In cooking state, press **Kitchen timer/Clock** to inquire the time of the day, the time will be displayed for 3 seconds.

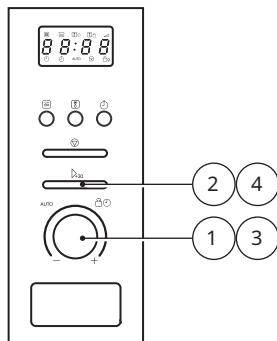

Auto menu

1. Turn the knob "A" left to choose the menu, and **A-1** to **A-8** will display.
2. Press **Start/+30 Sec** to confirm selected food.
3. Turn the knob "A" to choose the default weight as the menu chart.
4. Press **Start/+30 Sec** to start cooking.

MENU	WEIGHT	DISPLAY
A-1 Pizza	200g	200
	400g	400
A-2 Meat	250g	250
	350g	350
	450g	450
A-3 Vegetable	200g	200
	300g	300
	400g	400
A-4 Pasta	50g (with 450g cold water)	50
	100g (with 800g cold water)	100
A-5 Potato	200g	200
	400g	400
	600g	600
A-6 Fish	250g	250
	350g	350
	450g	450
A-7 Beverage	1 cup (120ml)	1
	2 cups (240ml)	2
	3 cups (360ml)	3
A-8 Popcorn	50g	50
	100g	100

Note: The Foodclasses can also be found on the label inside the door.

Trouble shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents.	In cooking, steam may come out of food. Most will get out from vents, but some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	<i>It is forbidden to run the unit without any food inside. It is very dangerous.</i>

Trouble	Possible cause	Remedy
Oven can not be started.	(1) Power cord not plugged tightly.	Unplug the cord. Wait 10 seconds and plug it again.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat	(4) Door not closed well.	Close door well.


Specifications

Model:	LAGAN 706.094.95
Rated Voltage:	220V~50 Hz
Rated Input Power (Microwave):	1250 W
Rated Output Power (Microwave):	800 W
Oven Capacity:	20 L
Turnable Diameter:	Ø 245 mm
External Dimensions:	595x344x394 mm
Net Weight:	15 kg
Noise level:	≤ 63dB (A)

Serial Number (start with SN, 22-digit code)

Serial number:xxxxxxxxxxxxxxxxxxxxxx

 Article Number (8-digit code)

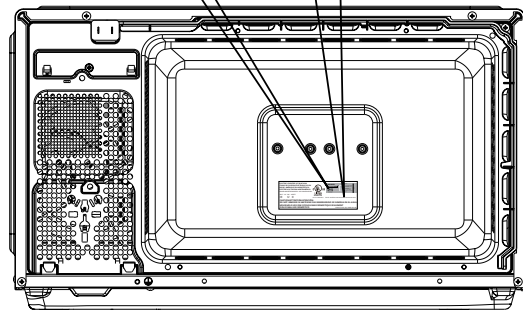

Picture for reference only

Installation and connection

1. This appliance is only intended for domestic use.
2. This oven is intended for built-in use only. It is not intended for counter-top use or for use inside a cupboard.
3. Please observe the special installation instructions.
4. The appliance can be installed in a 60cm wide wall-mounted cupboard.
5. The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
6. The mains voltage must correspond to the voltage specified on the rating plate.
7. The socket must be installed and connecting cable must only be replaced by a qualified electrician. If the plug is no longer to accessible following

installation, an all-pole disconnecting device must be present on the installation side with a contact gap of at least 3mm.

8. Adapters, multi-way strips and extension leads must not be used. Overloading can result in a risk of fire.
9. The product should not be mounted below 85cm.



The accessible surface maybe hot during operation.

Environmental concerns



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do not dispose of this product with household waste. Please send this product to WEEE collecting points where available.

Ikea guarantee

How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of your appliance at IKEA. The original sales receipt is required as proof of purchase. If service work is carried out under guarantee, it will not extend the guarantee period for the appliance.

Which LAGAN appliances are not covered by the IKEA 5-year guarantee?

LAGAN appliances purchased from IKEA before 1 May 2026 are covered by a 2-year guarantee, starting from the original date of purchase.

Who will execute the service?

Contact nearest IKEA store.

What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?

IKEA will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible colour differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.

How country law applies

The IKEA guarantee gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local

Area of validity

For appliances which are purchased in one EU country and taken to another EU country, the services will be provided in the framework of the guarantee conditions normal in the new country. An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information.

AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA to:

- make a service request under this guarantee.
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

How to reach us if you need our service



Service Hotline Number: 400-8002-345
Hotline Service Period: 9:00-21:00

The IKEA after sales customer service centre will assist you on the phone with basic trouble shooting for your appliance at the time of service call request. Please see the IKEA catalogue or visit www.ikea.com to find your local store phone number and opening time.

In order to provide you a quicker service, please also always refer to the IKEA article number (8 digit code) placed on the rating plate of your appliance.

SAVE THE SALES RECEIPT!

It is your proof of purchase and required for the guarantee to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.

Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

China RoHS

Table of Hazardous Substance Names and Containment Information in the Product

Component Name	Hazardous Substance									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBBs)	Polybrominated Diphenyl Ethers (PBDEs)	Di-n-butyl Phthalate (DBP)	Di-isobutyl Phthalate (DIBP)	Benzyl Butyl Phthalate (BBP)	Di(2-ethylhexyl) phthalate (DEHP)
Inverter	×	○	×	○	○	○	○	○	○	○
Touchscreen	×	○	○	○	○	○	○	○	○	○
Motor Assembly	×	○	○	○	○	○	○	○	○	○
Computer Board	×	○	×	○	○	○	○	○	○	○
Power Cord	×	○	○	○	○	○	○	○	○	○
Timer	×	○	×	○	○	○	○	○	○	○
Fan Assembly	×	○	○	○	○	○	○	○	○	○
High Voltage Transformer	○	○	×	○	○	○	○	○	○	○
High Voltage Diode Assembly	×	○	○	○	○	○	○	○	○	○
Control Panel Assembly	×	○	○	○	○	○	○	○	○	○
Filter Board Assembly	×	○	×	○	○	○	○	○	○	○
Water Pump Assembly	×	○	○	○	○	○	○	○	○	○
Temperature, Humidity Sensor	×	○	○	○	○	○	○	○	○	○
Thermostat	×	○	×	○	○	○	○	○	○	○
Speaker, Buzzer	×	○	○	○	○	○	○	○	○	○
Steam Generator	×	○	○	○	○	○	○	○	○	○
Cooktop Assembly	×	○	○	○	○	○	○	○	○	○
Oven Valve Body, Solenoid Valve, Nozzle	×	○	○	○	○	○	○	○	○	○
Oven Integrated Light	×	○	○	○	○	○	○	○	○	○
Oven Door Lock	×	○	○	○	○	○	○	○	○	○
Oven Temperature Probe	×	○	○	○	○	○	○	○	○	○
Oven Wiring Box	×	○	○	○	○	○	○	○	○	○
Oven Conversion Switch	×	○	×	○	○	○	○	○	○	○
Oven Power Regulator	×	○	○	○	○	○	○	○	○	○

Note:

- : Indicates that the content of the hazardous substance in all homogeneous materials of this part does not exceed the national standard requirements for the restriction of hazardous substances in electrical and electronic products.
- ×: Indicates that the content of the hazardous substance in at least one homogeneous material of this part exceeds the national standard requirements for the restriction of hazardous substances in electrical and electronic products.
- For parts not listed above, it is indicated that their hazardous substance content does not exceed the national standard requirements for the restriction of hazardous substances in electrical and electronic products.
- The components listed above may vary slightly depending on the product model.
- Under normal usage conditions, the environmental protection usage period of this product is 15 years; it is recommended to replace the unit with a new one after a certain number of years of use.

To Protect the Environment and Human Health:

- After this product becomes waste, please separate it from household waste. Disposal must comply with local waste management regulations. Before disposing, disconnect the power cord to prevent the equipment from being re-used. Consumers are responsible for delivering it to a qualified recycling point
- The recycling center will recycle and reuse materials in the product through appropriate methods.
- For detailed information on the recycling and disposal of this product, please consult the local government, waste processing center, or retailer.

Environmental List

Food Contact Material Information

Please use this product normally as required by the instructions.
The food contact materials and components of this product comply with GB 4806.1, GB 9685, and the corresponding food safety national standards for materials. Specific information is as follows:

Component Name	Component Material	Compliance Standard	Note
Water Tank, Water Container Assembly, Water Reservoir, Water Reservoir Assembly, Water Container Hose	ABS/PC/PC Tritan/ PP/ABS+PC	GB 4806.7	Only Contact Water
Water Container Assembly (Water Pipe Plug)	POM	GB 4806.7	Only Contact Water
Water Container Assembly (Spring)	Stainless Steel 06Cr19Ni10	GB 4806.9	SUS304, Water Contact Only
Float Ball	PP+RS9120	GB 4806.7	Water Conduit, Water Contact Only
Steam Generator Assembly (Electrical Components)	Aluminum Alloy YZAlSi11Cu3/ Stainless Steel 06Cr19Ni10	GB 4806.9	Only Contact Water
Thick Film Steam Generator Assembly	PC/POM/PPS/ Stainless Steel 06Cr19Ni10/ High-Temperature Oil Coating/EPDM Rubber/ Silicone	GB 4806.7/ GB 4806.9/ GB 4806.10/ GB 4806.11/ GB 4806.16	Only Contact Water
Water Pump	ABS/PC/POM/Rubber/Silicone	GB 4806.7/ GB 4806.11/ GB 4806.16	Only Contact Water
Exhaust Valve	PPS	GB 4806.7	Only Contact Steam
Waveguide Cover	PP/Mica	GB 4806.7/ GB 4806.4	---
Door Seal	PET	GB 4806.7	---
Water Tank Insert	PBT	GB 4806.7	Water Contact Only
Steam Generator Cover, Steam Tray Bracket	PPS	GB 4806.7	Only Contact Water
Plastic Tee Pipe	LCP E130i	GB 4806.7	---
Water Tank Base	50%ABS+50%PC	GB 4806.7	Only Contact Water
Steaming Rack	PTFE	GB 4806.7	---
Grate, Rotating Spindle, Roasting Fork, Roasting Fork Fastening Screw, Temperature Sensor, Baking Tray, Cavity	Stainless Steel 06Cr19Ni10	GB 4806.9	SUS304
Heating Element	Stainless Steel 06Cr19Ni10/ Stainless Steel 06Cr18Ni11Ti/ Stainless Steel GH2132/ Stainless Steel 06Cr25Ni20	GB 4806.9	---
Heating Element, Carbon Tube, Halogen Tube, Graphene Tube	Quartz	GB 4806.5	---
Tongs, Rotating Spindle, Grate, Roasting Fork Fastening Screw, Coating, Hanging Bracket	Wire Base + Copper/Nickel/ Chrome Plating	GB 4806.9	Optional Accessories, Must Not Come into Contact with Acidic Foods

Food Contact Material Information

Please use this product normally as required by the instructions.

The food contact materials and components of this product comply with GB 4806.1, GB 9685, and the corresponding food safety national standards for materials. Specific information is as follows:

Component Name	Component Material	Compliance Standard	Note
Inner Partition, Heat-Resistant Glass	Borosilicate Glass/Ceramic Glass	GB 4806.5/ GB 4806.4	---
Cavity, Door, Heating Element Cover	Stainless Steel 10Cr17	GB 4806.9	SUS430
Door Body, Cavity Substrate/Coating	Electrogalvanized Steel Plate Substrate/ Epoxy Polyester Coating Cold Rolled Steel Plate Substrate/ Epoxy Polyester Coating Hot-Dip Galvanized Steel Plate Substrate/Epoxy Polyester Coating Hot-Dip Galvanized Steel Plate Substrate/High-Temperature Organic Silicone Coating Stainless Steel 10Cr17 Substrate/ High-Temperature Organic Silicone Coating Stainless Steel 06Cr19Ni10 Substrate/High-Temperature Organic Silicone Coating Aluminum-Coated Steel Plate Substrate/High-Temperature Organic Silicone Coating	GB 4806.9/ GB 4806.10	Do Not Contact with Acidic Foods
Cavity Substrate/Coating, Baking Tray Substrate/Coating	Enamel Steel Substrate/ Enamel Coating	GB 4806.9/ GB 4806.3	Baking Tray is an Optional Accessory
Baking Tray Substrate/Coating	Aluminum Alloy/Non-Stick Coating Aluminized Steel/High-Temperature Oil Coating Aluminum Alloy/Ceramic Oil Coating	GB 4806.9/ GB 4806.10	Optional Accessories
Steam Generator Assembly (Water Pipe), inlet pipe, outlet pipe, seal ring (Water Box, Cavity), door body drop gel	Silicone	GB 4806.16	Steam Generator Assembly (Water Pipe) is an optional accessory, Steam Generator Assembly (Water Pipe), inlet pipe, outlet pipe only contact water
Steam Generator Assembly (Cover)	Ceramic	GB 4806.4	Only Contact Water

Note:

1. The listed components are ones that may come into contact with food; they should not be used as containers for long-term food storage.
2. The table includes all components of this type of product produced by our company.
Different models may use some or all of the materials and components listed. The actual product shall prevail. If the regulations or standards are updated, this statement is deemed to comply with the latest version, and the latest test report shall serve as the definitive proof.

目录

安全警示.....	26	安装和连接.....	37
产品描述.....	31	环保要求.....	37
控制面板.....	32	宜家质保.....	38
使用微波炉.....	33	中国RoHS	40
故障排除.....	36	环保清单	41
规格	37		

安全警示

重要的安全说明

- 请仔细阅读并妥善保管以供将来参考。
- 使用过程中，请将家用电器的电源插头完全插入电源插座中，并保持电源插头与插座接触良好。
- 当需要使用延长线电源插座时，请使用符合国家标准要求的延长线电源插座。
- 人员离开现场时，请将电源断开。
- 产品出现异常噪声、异常气味、异常高温或故障时，请立即停止使用，关闭开关，断开电源。
- ⚠ **警告：** 不应从带插座的灯头上引接电源供给家用电器。
- ⚠ **警告：** 延长线电源插座所接家用电器的总额定电流值，不应超过原固定插座或线路的额定电流值。
- ⚠ **警告：** 本产品不应在易燃易爆物品附近或类似环境中使用。
- ⚠ **警告：** 使用者不应自行拆卸家用电器，不应变更内部接线、部件和保护装置。
- ⚠ **警告：** 从插座上拔下插头时，不应在电源线施加拉力。
- ⚠ **警告：** 使用者不应以普通导电体或超出规定电流容量的熔断体替换家用电器和电源的熔断体。
- ⚠ **警告：** 使用者不应自行改变低压断路器或剩余电流动作保护器的设定值。
- 用户的维护保养期间有必要采取预防措施：
 - ※ 待产品冷却后进行一定的清洗。应定期清洁微波炉并清除微波炉所有食物残渣。不清洁微波炉会致使器具表面劣化，这会影响器具的寿命可能会导致危险的情况。
 - ※ 可用蘸有软性洗涤剂(如洗洁精)的布块擦拭产品外壳，再用湿布擦干净，最后用干布擦干，严禁使用钢丝刷等硬物擦拭产品。请勿清洁炉门安全锁系统。
 - ※ 保持炉腔底部清洁，可避免转盘微波炉工作过程中转盘因转动而产生的异常噪音。
- ※ 产品导波有侧面导波和顶部导波两种方式。侧面导波的产品腔体右侧有波导口，请保持波导口的清洁，请不要把波导盖(云母片)取下，以免打火。
- ※ 清洁门封、腔体和邻近的部件细节；长时间不使用产品，使用前请在烧烤功能状态下使用几分钟，以蒸发产品内聚积的湿气。(以产品实际功能为准)
- ※ 保持炉腔底部清洁，可避免工作过程中转盘因转动而产生的异常噪音。(仅适用于带转盘的微波蒸汽烤箱)。
- 器具不打算由存在肢体、感官或精神能力缺陷或缺少使用经验和知识的人(包括儿童)使用，除非有负责他们安全的人对他们进行与器具使用有关的监督或指导。
- 应照看好儿童，确保他们不玩耍本器具。
- 该器具使用的最高海拔4000米。
- 本器具含有仅用于实现功能用途的接地连接。(以产品实际功能为准)
- 如果电源软线损坏，为了避免危险，必须由制造商、其服务机构或类似的专业人员更换。
- ⚠ **警告：** 如果微波炉门或门封已损坏，则不得再使用，直到经有资格的维修人员修好为止。
- ⚠ **警告：** 除有资格的维修人员外，其他人来执行检修操作都是危险的，包括拆下防止微波能量泄漏的防护盖等操作。
- ⚠ **警告：** 禁止加热装在密封容器内的液体或其他食物，因为这样有可能发生爆炸。
- 器具打算用于家用和类似用途，例如：
 - ※ 在商店、办公室及其他工作环境的员工厨房区域；
 - ※ 农庄；
 - ※ 酒店，汽车旅馆和其他居住环境中由客户使用；
 - ※ 仅提供床位和早餐的快捷酒店环境。
- 微波炉顶部外壳的上方所需自由空间的最小高度。
- 仅使用适合在微波炉内使用的器皿。

- 微波炉烹调食物和饮料时，不准许使用金属容器。如果制造商指定了适合于微波烹饪的金属容器的尺寸和形状，则此要求不适用。
- 当加热塑料或纸质容器中的食物时，注意观察微波炉，防止有着火的可能。
- 用微波炉加热食物和饮料。烘干食品或衣物，及加热暖垫、拖鞋、海绵、湿布和类似物品，可导致受伤、着火或火灾的危险。
- 小心烟雾出现
如发现烟雾，关掉器具开关或拔掉电源插头，并保持炉门关闭，以抑制火焰蔓延。
- 微波加热饮料可能导致延迟喷溅沸腾，因此取放时应小心谨慎。
- 奶瓶和婴儿食品罐中的食物应经过搅拌或摇动，喂食前应检查瓶内食物的温度，避免烫伤。
- 微波炉不能用来加热带壳的蛋类和已煮熟的完整的蛋，因为在用微波加热时，甚至在加热之后它们可能会发生爆炸。
- 清洁门封、腔体和邻近部件的细节。
- 门封清洁
可用蘸有碱性洗涤剂的布块来擦拭门封（细缝部分可用蘸有牙膏的小刷子进行清理），再用湿布擦干净，最后用干布擦干。
- 宜定期清洁微波炉并清除所有食物残渣。
- 不清洁微波炉会致使器具表面劣化，影响器具的寿命，而且可能会导致危险的情况。
- 此微波炉只能使用为该微波炉推荐的温度探头。（以产品实际功能为准）
- 对于在距地面900mm及以上高度使用的且具有可拆卸的转盘的固定式和嵌装式器具，使用说明应表明当从器具中取出容器时，注意不要将转盘拖出。此要求不适用于具有水平底部铰链门的器具。（以产品实际功能为准）
- 不应使用蒸汽清洁器来清洗器具。
- 微波炉是嵌装使用或放置于橱柜中使用。
- 制造商应提供橱柜的最小尺寸(以技术参数和安装说明为准)，并且使用说明应表明在器具工作时橱柜的所有门应打开。
- 带有一个附加装饰性门的微波炉，该器具工作时装饰性门应打开。（以产品实际功能为准）
- ⚠ **警告:** 当器具以组合模式工作,因产生高温,儿童宜在成人的监督下使用。
- 器具在使用期间会发热。注意避免接触烤箱内的发热单元。
- ⚠ **警告:** 在使用时可触及部分可能会发热。儿童宜远离。
- 不要使用粗糙磨料清洗剂或锋利的金属刮刀清洁烤箱门的玻璃，因为其会擦伤玻璃表面,从而可能导致玻璃破碎。
- ⚠ **警告:** 为避免可能出现的电击,换灯前应确定器具已断开电源。
- 不能使用蒸汽清洁器。
- 只使用该烤箱推荐的温度传感探头。
（以产品实际功能为准）
- ⚠ **警告:** 器具使用完毕后，发热管和腔体仍有余热，避免触碰腔体内部，防止烫伤。
- ⚠ **警告:** 只有在已经提供充分的指导以致于儿童能够采用安全的方法使用微波炉，并且明白不正确的使用会造成危险时,才能允许儿童在无人监控的情况下使用微波炉。
- ⚠ **警告:** 在使用时可触及部分可能会发热，儿童应远离，器具工作期间，某些表面的温度很高。贴有“高温表面”标志的表面在使用过程中会变烫。
- 摆放在小孩触摸不到的地方
只有在已经提供充分的指导以致于儿童能够采用安全的方法使用产品，并且明白不正确的使用会造成危险时，才能允许儿童在无人监控的情况下使用产品。当器具以组合模式工作，因温度升高，儿童必须在成人的监督下使用。
- 高温表面，防止烫伤
- 把手的内侧中部可能会发烫；器具已断开电。
- 烤箱的器具不能安装在装饰性门后面以免过热。
- 清洁与食物接触的表面
 - ※ 煮食过程中产生的油脂会腐蚀炉腔、影响加热效果，从而改变食物的味道。因此使用后请及时清洁炉腔；
 - ※ 常用温水清洗金属烤盘、陶瓷盘和金属烤架。注意在微波炉长时间烹饪后，不要用冷水立即清洁。（本说明是清洁方法，附件具体以整机附带为准）
- 奶瓶和婴儿食品罐应经过搅拌或摇动，喂食前应检查瓶内食物的温度，避免烫伤。
- 不能在外接定时器或独立的遥控控制系统的方式下运行。
- **警告:** 错误使用可能引起的潜在的伤害：
 - ※ 禁止将金属或异物，如铁丝、手指等深入产品的吸气口、排气口、百叶窗，否则可能导致触电受伤。假如不慎有异物插入产品，请拔掉电源插头，联系我司维修服务中心；
 - ※ 电源线、插头，不要接近排气口、外罩、温度过高或潮湿的地方，以免电源线老化，造成危险；
 - ※ 使用完毕后，请务必及时拔出电源插头，不要将其靠近火源或浸入水中；
 - ※ 不要将电源线和插头直接放在外罩上，以防外罩余热损坏电源线；

※ 烹饪中不要拔掉插头。如果拔掉插头会产生火花，火灾，触电等；

※ 禁止油炸食物。切勿用产品油炸食物，以防发生火灾。

- 内有高压电源，切勿拆开外罩，进行修理和改。

⚠ **警告：**除有资格的维修人员外，其他人来执行检修操作都是危险的。使用过程中遇到障碍，请联系我司维修客服中心。

- 不能将任何异物塞入炉门联锁开关。
- 清洁时由使用者设置的控制位置高于在正常烹饪时的位置，表面温度可能高于平常温度，儿童宜远离。
- 延时散热（以产品实际功能为准）
烹饪结束后风扇仍会吹风散热，此时可开门取出食物，关门后待散热完成风扇声自行停止，以上属正常情况无需处理。
- 烹饪过程散热（以产品实际功能为准）
烹饪过程或暂停状态下，风扇会继续工作以，属于正常现象，此时继续完成烹饪即可。

 
- 应避免过度加热

微波产品最大的特点是快捷，启动产品后，必须经常留意炉内烹饪情况，避免过度加热。

过度加热会冒烟或者着火，器皿过热会熔裂。当加热用塑料或纸包装的食物时，应该注意观察微波炉，因为有着火的可能。长时间加热少量食物，由于热量没被足量的食物吸收，炉腔会异常高温，易烫伤。所以，结束后不要接触炉腔。

请妥善保管本手册

请仔细阅读并妥善保存，以备将来参考。

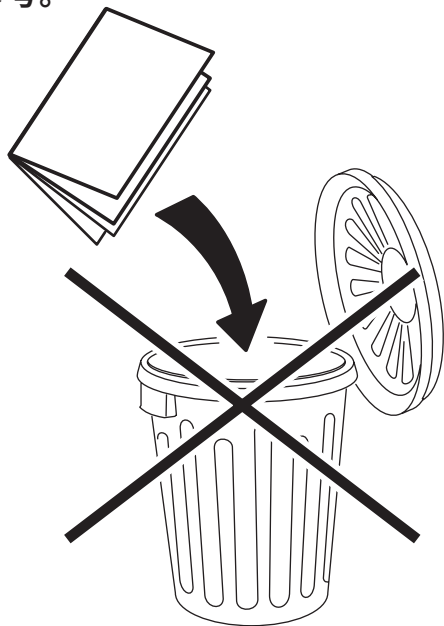

降低接地安装人员的受伤风险

⚠ 危险

触电危险

接触某些内部组件可能会导致严重人身伤害，甚至死亡。请勿拆卸本电器。

⚠ 警告！

触电危险

接地不当可能会导致触电。在正确安装本电器并对其进行接地之前，请勿插入电源插座。

本电器必须接地。在发生电气短路的情况下，接地能为电流提供引流线，从而降低触电风险。本电器配有带接地线和接地插头的电源线。必须将插头插入安装正确且已接地的插座。

如果未完全理解接地说明或不确定电器是否已正确接地，请咨询合格的电工或维修人员。如有必要使用延长线，请仅使用 3 芯延长线。

- 我们所提供的电源线较短，以便降低因被较长的电线缠绕或绊倒而引发的风险。
- 如果使用长电源线或延长线：
 - 电源线或延长线的电气额定值应至少与本电器的电气额定值相同。
 - 延长线必须为接地型 3 芯电源线。
 - 对长电源线进行布线时，应确保其未搭在柜台顶部或桌面，以免儿童对其进行拉扯或不慎被绊倒。

清洗

务必拔出该电器的电源插头。

- 使用略湿的清洁布，清洁使用后的微波炉腔体。
- 用肥皂水常规方式清洗配件。
- 当舱门框和密封圈及相邻部件变脏时，必须用湿布小心清洗。
- 请勿用粗糙的研磨清洁剂或锋利的金属刮刀来清洁微波炉舱门玻璃，以防划伤表面，导致玻璃破碎。
- 清洗提示 ★ 为方便清洗加热食物可能触及的微波炉内壁：将半个柠檬置于碗中，加入 300 毫升（1/2 品脱）的水，并用 100% 微波火力加热 10 分钟。用柔软的干布擦拭微波炉。

⚠ 注意

人身伤害危险

顶盖可防止接触微波能量，因此必须由专业人员执行需要拆除顶盖的服务或维修操作，以防发生危险。

请参阅有关“可在微波炉中使用或应避免在微波炉中使用的材料”的说明。

某些非金属器具可能不适于微波加热。如有疑问，您可以按照以下步骤测试所述器具。

- 器具测试：
- 在可安全进行微波加热的容器中倒入 1 杯冷水（250 毫升），并将可疑器具一放入。
 - 以最大火力加热 1 分钟。
 - 小心感受器具的温度。如果空器具变热，则不得将其用于微波加热。
 - 加热时间请勿超过 1 分钟。

可在微波炉中使用的材料

器具	备注
加热盘	请遵循制造商的说明。加热盘底部必须至少高出转盘 5 毫米（3/16 英寸）。使用不当可能会导致转盘损坏。
餐具	仅限可安全进行微波加热的餐具。请遵循制造商的说明。请勿使用破裂或有缺口的餐盘。
玻璃罐	务必移除盖子。仅用于将食物加热至温热。多数玻璃罐不耐热，且可能会破裂。
玻璃器皿	仅限耐热的微波炉适用玻璃器皿。确保无金属饰边。请勿使用破裂或有缺口的餐盘。
微波烹饪袋	请遵循制造商的说明。请勿用金属夹将其密封。留出缝隙以便蒸汽逸出。
纸盘和纸杯	仅用于短时间加热。请勿在加热时离开微波炉。
纸巾	用于覆盖食物以重新加热和吸收脂肪。仅在有监督的情况下用于短时间加热。
羊皮纸	用作盖子以防止飞溅或用作蒸烘包裹物。
塑料容器	仅限可安全进行微波加热的餐具。请遵循制造商的说明。应标注“微波安全”字样。随着内部食物变热，某些塑料容器会变软。“蒸煮袋”和密闭的塑料袋应按包装指示撕开、戳破或排气。
塑料包裹膜	仅限可安全进行微波加热的餐具。用于在加热期间覆盖食物以保持水分。请勿让塑料包裹膜接触食物。
温度计	仅限微波安全的温度计（肉类和糖果温度计）。
蜡纸	用作盖子以防止飞溅和保持水分。

避免在微波炉中使用的材料

器具	备注
铝制托盘	可能会导致电弧放电。将食物转移到可微波加热的盘中。
带金属柄的食物纸盒	可能会导致电弧放电。将食物转移到可微波加热的盘中。
金属或金属边饰的器具	金属可阻止食物进行微波受热。金属边饰可能会导致电弧放电。
金属捆扎带	可能会导致电弧放电，并有可能导致微波炉起火。
纸袋	可能会导致微波炉起火。
塑料泡沫	暴露于高温时，塑料泡沫可能会熔化或污染内部液体。
木材	在微波炉中使用时，木材会变干并有可能开裂或破裂。

安全注意事项

△ 注意

- 烹饪完成后，整机风扇会持续工作以便散热，属于正常现象。



禁止微波空载

切勿在没有放置食物的情况下启动机器，以免引起炉内温度过高发生异常。



过热保护

 
连续使用时间不宜过长，以免机器进入过热保护状态而停止加热，待冷却后可继续使用。



插座安全


为了安全着想，插头必须连接接地插座，否则会有触电危险。

温馨提示

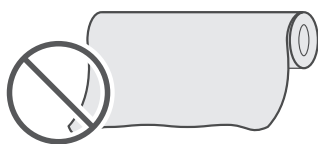


禁用锡箔纸

 - 微波功能下禁止使用，我会火光四射哦！

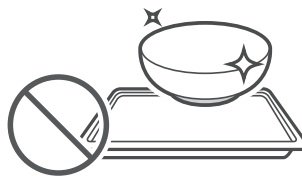


禁用金属器皿

 - 微波功能下禁止使用，我会火光四射哦！

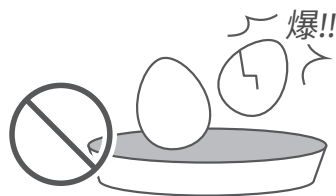


禁加热带壳食物

 - 微波加热密封带壳的食物会炸开！

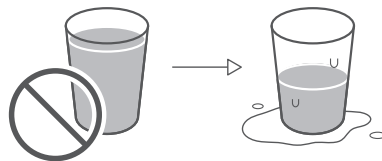

容量不可超2/3

 - 液体加热时不要超过容器的2/3，否则可能会溢出。

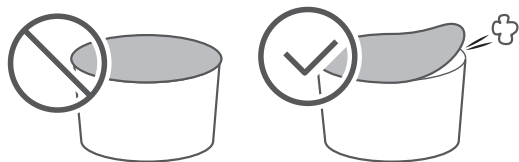

密封食物预留开口


- 加热密封食物时要预留一个开口，否则会炸开哦！

产品描述

设置微波炉
微波炉零件和配件的名称


从纸箱和微波炉腔中取出微波炉及所有材料。
此微波炉随附以下配件：

玻璃托盘	1 个
转盘环组件	1 个
使用说明书	1 个
钻模板	1 个
装配说明书	1 个

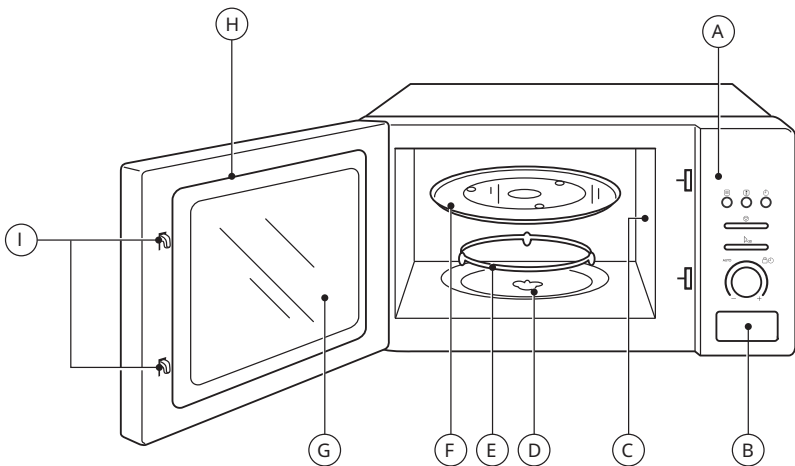 


- A) 控制面板
- B) 开门按钮
- C) 波导罩（请勿移除）
- D) 转盘轴
- E) 转盘环
- F) 玻璃托盘
- G) 观察窗
- H) 舱门组件
- I) 安全联锁系统

 转盘安装

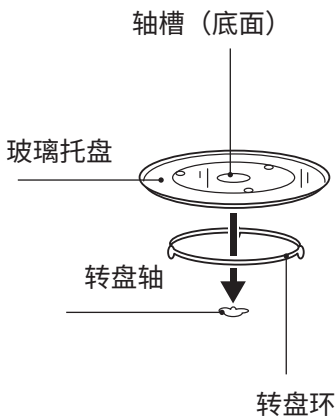

- a) 切勿将玻璃托盘倒置。切勿妨碍玻璃托盘转动。
- b) 加热期间始终须使用玻璃托盘和转盘环。
- c) 所有食物和食物容器均应始终放在玻璃托盘上进行加热。
- d) 如果玻璃托盘或转盘环出现破裂或断裂，请与最近的授权服务中心联系。
- e) 切勿将冷冻食品直接放在热的转盘上。

 控制面板

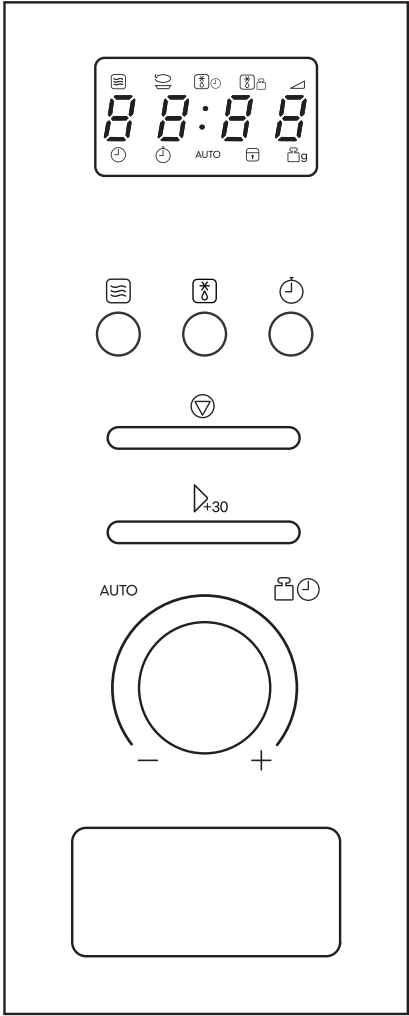


说明

-  微波
-  厨房定时器/时钟
-  启动/+30 秒/确认
-  时间
-  按重量/时间解冻
-  停止/清除
-  自动菜单

使用微波炉



使用旋钮

 要使用选择旋钮，请向内按压以将其弹出。

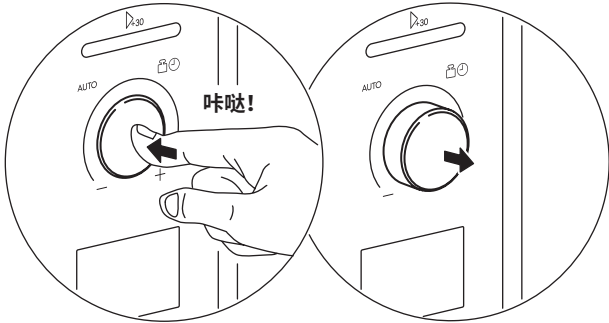

打开舱门

  按下按钮以开启舱门。

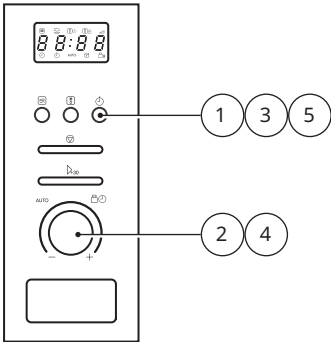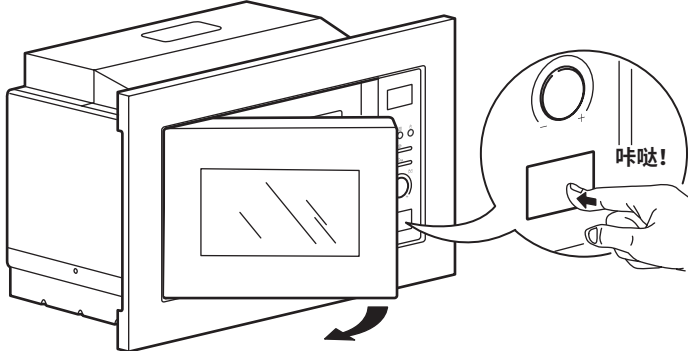

时钟设置

当微波炉通电时，屏幕会显示“0:00”，蜂鸣器也会发出一声蜂鸣。

 
- 1. 连按 厨房定时器/时钟两次可选择时钟功能，小时数字也会随之闪烁。
- 2. 转动旋钮 以调整小时数字，且输入的时间应介于 0-23 之间。
- 3. 按下 厨房定时器/时钟，分钟数字将随之闪烁，小时数字也会亮起。
- 4. 转动旋钮 以调整分钟数字，且输入的时间应介于 0-59 之间。
- 5. 按下 厨房定时器/时钟以完成时钟设置，: 会随之闪烁。

注意：时钟设置期间，如果未在 1 分钟内按下 厨房定时器/时钟进行确认，微波炉则会自动返回先前的状态。

童锁功能

锁定：在等待状态下，按住 停止/清除 3 秒钟，微波炉将发出长“哔”声以表示进入童锁状态，且屏幕显示 [] 或当前时间。

解锁：在锁定状态下，按住 停止/清除 3 秒钟，微波炉将发出长“哔”声以表示解除锁定。

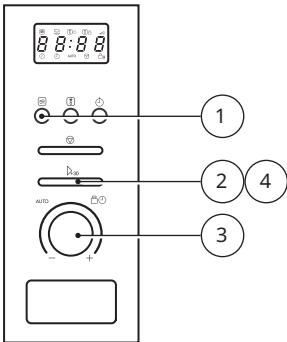


微波加热

- 1. 按下 微波一次，屏幕会显示闪烁的 80 字样。连续按下 微波进行选择，或转动旋钮以选择所需火力。
- 2. 然后，按下 启动/+30 秒以确认选定的火力。
- 3. 转动旋钮 ，设置 0:05 到 95:00 的加热时间。
- 4. 再次按下 启动/+30 秒，开始加热。


注意：转动旋钮时的时间步骤如下：

0-1 分钟	: 5 秒钟
1-5 分钟	: 10 秒
5-10分钟	: 30 秒
10-30分钟	: 1 分钟
30-95分钟	: 5 分钟

 快速启动替代方案 1

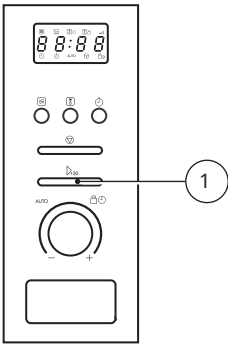

快速启动替代方案 2

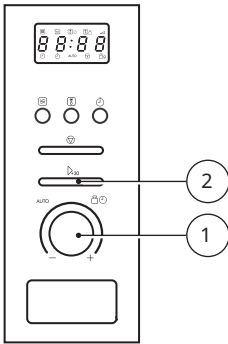 

快速启动替代方案 1


- 1. 在待机模式下，按下 Δ_{30} 启动/+30 秒以全火力加热 30 秒，而每多按一次可延长 30 秒加热时间（最长为 95 分钟）。

快速启动替代方案 2


- 1. 在待机模式下，向右转动旋钮以设置时间。
- 2. 按下 Δ_{30} 启动/+30 秒以全微波火力开始加热。

注意：在微波或定时解冻状态下，每按一次 Δ_{30} 启动/+30 秒可增加 30 秒加热时间。

 按重量解冻

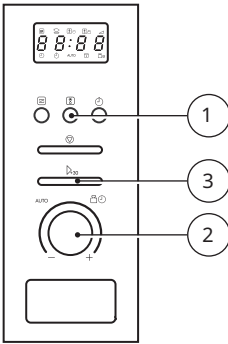

按时间解冻

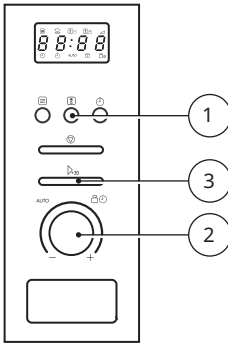 

按重量解冻

- 1. 按下 Δ_{30} 按重量/时间解冻一次，微波炉会显示 dEF1。
- 2. 转动旋钮“ Δ_{30} ”以选择介于 100 到 2000 克的食物重量。
- 3. 按下 Δ_{30} 启动/+30 秒以启动解冻。

按时间解冻

 
- 1. 连按 Δ_{30} 按重量/时间解冻两次，微波炉会显示 dEF2。
- 2. 转动旋钮“ Δ_{30} ”以选择解冻时间。最长时间为 95 分钟。
- 3. 按下 Δ_{30} 启动/+30 秒以启动解冻。

 
所设解冻时间过半后，产品会提示您翻转食物。打开门并翻转食物，然后关上门并按下 Δ_{30} 启动/+30 秒以继续解冻。

厨房定时器

- 1. 按下 Δ_{30} 厨房定时器/时钟一次，屏幕会显示 00:00，时钟指示灯也会亮起。
- 2. 转动旋钮“ Δ_{30} ”以输入正确的时间。（最长设置时间为 95 分钟。）
- 3. 按下 Δ_{30} 启动/+30 秒以确认设置，此时时钟指示灯也会闪烁。

所设厨房时间到时后，时钟指示灯将熄灭，蜂鸣器也会响 5 声。

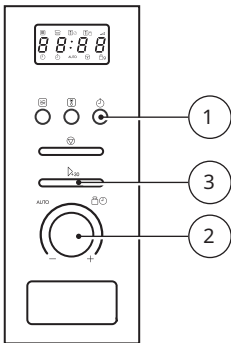

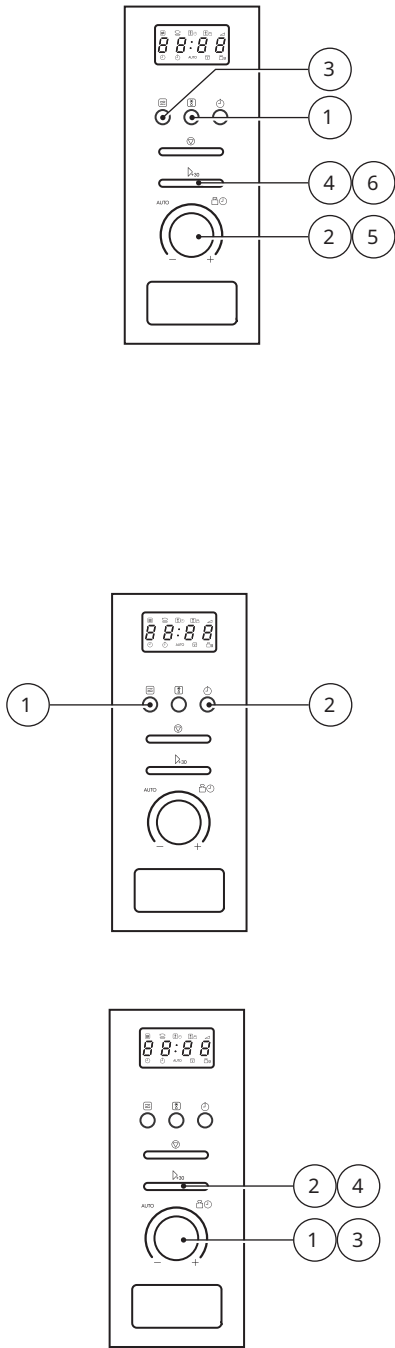

您可以设置本产品以进行多阶段烹煮，以便先解冻，然后再加热：

多阶段加热

1. 连按 **按重量/时间解冻** 两次，微波炉会显示 **dEF2**。
2. 转动旋钮 **以选择解冻时间。**
3. 按下 **微波** 一次，屏幕会显示 **80**；多次按下此按钮或转动旋钮，则可设置所需的微波火力。
4. 按下 **启动/+30 秒** 以确认火力设置。
5. 转动旋钮 **以选择加热时间。**
6. 按下 **启动/+30 秒** 以启动加热。

所设解冻时间过半后，产品会提示您翻转食物。打开门并翻转食物，然后关上门并按下 **启动/+30 秒** 以继续解冻。此时，蜂鸣器将再响一声以进入第二阶段加热。烹煮完成后，蜂鸣器会响五声。

查询功能

1. 在微波加热状态下，按下 **微波**，会显示当前功率 3 秒钟。
2. 在加热状态下，按下 **厨房定时器/时钟** 可查询当天时间，时间会显示 3 秒钟。

自动菜单

1. 向左转动旋钮 **以选择菜单，将显示 A-1 到 A-8。**
2. 按下 **启动/+30 秒** 以确认选定的食物。
3. 转动旋钮 **以将默认重量选作菜单图表。**
4. 按下 **启动/+30 秒** 以启动加热。

菜单	重量	显示
A-1 比萨饼	200g	200
	400g	400
A-2 肉类	250g	250
	350g	350
	450g	450
A-3 蔬菜	200g	200
	300g	300
	400g	400
A-4 意大利面	50g (带 450g 冷水)	50
	100g (带 800g 冷水)	100
A-5 土豆	200g	200
	400g	400
	600g	600
A-6 鱼类	250g	250
	350g	350
	450g	450
A-7 饮料	1 杯 (120 ml)	1
	2 杯 (240 ml)	2
	3 杯 (360 ml)	3
A-8 爆米花	50g	50
	100g	100

注意：此外，还可在舱门内的标签上查看“食物分类”。

故障排除

正常	
微波炉干扰电视接收	微波炉运行时可能会干扰收音机和电视接收。它类似于小型电器所产生的干扰，如搅拌机、吸尘器、电风扇。这属于正常现象。
微波炉灯昏暗	在低火力微波加热状态下，微波炉灯可能会变暗。这属于正常现象。
蒸汽积聚在舱门上，热空气从通风口排出。	加热时，食物可能会产生蒸汽。多数蒸汽均可从通风口排除，但部分蒸汽也可能会在舱门等低温区域积聚。这属于正常现象。
微波炉在未放入食物的情况下意外启动。	严禁在未放入任何食物的情况下运行设备。 此举十分危险。

故障	潜在原因	解决办法
微波炉无法启动。	(1) 电源线未插紧。	拔出电源插头。 等待 10 秒钟，然后再次插入插头。
	(2) 保险丝熔断或断路器跳闸。	更换保险丝或复位断路器（由我公司专业人员进行维修）。
	(3) 电源插座出现故障。	用其他电气设备测试电源插座。
微波炉无法加热	(4) 舱门未关紧。	重新关好舱门。


规格

型号：	LAGAN 706.094.95
额定电压：	220V~50Hz
额定输入功率（微波）：	1250 W
额定输出功率（微波）：	800 W
微波炉容量：	20 L
转盘直径：	Ø 245 mm
外部尺寸：	595 × 344 × 394 mm
净重：	15 kg
噪音：	≤ 63dB (A)

序列号（以 SN 开头的 22 位代码）

序列号：XXXXXXXXXXXXXXXXXXXXXX

 产品编号（8 位代码）

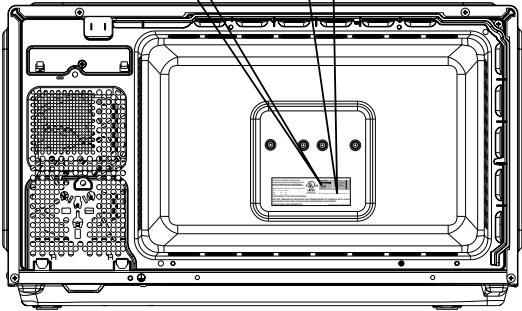

图片仅供参考

安装和连接

1. 本电器仅供家庭使用。

2. 本产品仅供嵌入式使用。它不适于柜台使用或在橱柜内使用。

3. 请遵守特殊安装说明。

4. 本设备可安装在 60 厘米宽的壁挂式橱柜中。

 
5. 本设备配有插头，且须连接到正确安装并接地的插座上。

6. 电源电压必须与铭牌上指定的电压相匹配。

7. 无论是安装插座还是更换连接电缆，均须由合格的电工完成。如果在安装后无法再触及插头，则须在安装侧安装全极断开装置，且接触间隙至少需达到 3 毫米。
8. 不得使用适配器、多路带和延长线。超载可能会引发火灾。

9. 本产品的安装高度不应低于 85 厘米。
- 操作期间，可接触表面可能会变热。

环保要求

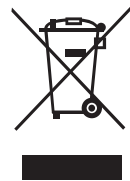

根据电子电气设备废弃物（WEEE）指令，电子电气设备废弃物应单独进行收集和处理。未来若需处理本产品，请勿将其与生活垃圾一同处理。请将本产品送往电子电气设备废弃物收集点（如果有）。

宜家质保

服务指引

● 宜家产品的质保期有多长？

自原始购买之日起，宜家电器享有五 (5) 年质保服务。需提供原始销售收据作为购买凭证。如果质保期内出现售后服务，售后服务不会延长产品的质保期限。

● 哪些 LAGAN 电器不享受宜家的 5 年质保？

对于 2026 年 5 月 1 日之前从宜家购买的 LAGAN 电器，自原始购买之日起，质保期为两 (2) 年。

● 由谁提供售后服务？

宜家将通过自己的售后服务中心或者经授权的第三方提供售后服务。

● 产品质保涵盖哪些内容？

质保涵盖从宜家购买日期算起，由制造问题或不良材料导致的设备故障。本质保仅对家用生效。"产品质保不涵盖哪些内容？" 标题中规定了例外条件。质保期内的维修成本，例如修理、配件、人工和差旅费无需用户承担，前提是维修设备时不产生特别支出。更换下来的部件将归宜家所有。

● 宜家将如何纠正问题？

宜家会对产品进行检查，并单独裁定产品是否享受质保。如果产品享受质保，宜家或指定的售后服务方会单独裁定是否维修缺陷产品，还是替换为相同或同等产品。

● 产品质保不涵盖哪些内容？

正常磨损。

故意或疏忽造成的损坏；不遵守操作说明、不正确安装或连接错误电压造成的损坏；化学或电化学反应、生锈、腐蚀造成的损坏；或者水造成的损坏，包括但不限于水中过量石灰造成的损坏；以及异常环境条件造成的损坏。

易损件，包括电池和灯。

不影响设备正常使用的非功能和装饰性部件，包括各种划痕和色差。

外物以及清洗或疏通过滤器、排水系统或肥皂盒导致的意外损坏。

以下部件受损：陶瓷玻璃、附件、餐具篮、进水和排水管、密封件、灯和灯盖、屏幕、旋钮、外壳和外壳部件。除非能证明受损是由生产故障所导致。

维修人员未能发现故障问题。

维修工作不是由我们的指定服务提供商和/或授权服务合作伙伴执行，或者未使用原厂配件。

因错误安装或未按照规范安装而导致的维修。

设备未在家用环境中使用，即用于专业用途。

运输过程中损坏。如果客户将产品运送到自己家或另一地址，宜家对运输中产生的任何损坏不负责。如果宜家负责将产品运到客户指定送货地址，那么运输途中发生的产品损坏由宜家承担。

宜家设备的初装费用。如果宜家指定服务提供商或其授权服务合作伙伴依照保修条款维修或更换设备，如有必要，指定服务提供商或其授权服务合作伙伴应重新安装修复后的设备或安装替换。

● 如何遵守当地法律？

宜家质保政策为您提供的合法权益符合或超过所有当地法律要求。这些条件不会以任何方式限制当地法。

● 有效区域。

此宜家保障仅适用于在中国购买并安装使用的产品。

只有设备符合以下条件并按照以下条件进行安装，宜家才有义务依照保障框架提供维修服务：

- 提出保障申请时所在国家的技术规格；
- 《安装说明》和《用户手册安全信息》。

● 宜家产品售后。

请及时联系宜家指定售后服务方，以便：

提出保障服务申请；

要求宜家对其电器产品安装于宜家厨房家具进行解答；

要求宜家对其产品功能进行解答；

为确保我们为您提供最佳协助，联系我们之前请仔细阅读《安装说明》和/或《用户手册》。

服务热线：400-8002-345

热线时间：9:00-21:00

为向您提供更快速的维修服务，请同时提供设备铭牌上注明的宜家产品编号（8位编码）。

●保留销售收据！

收据是您的购买凭证，在申请保修时需要提供收据。销售收据还注明宜家店名以及您所购买的每件设备的编号（8位编码）。

●您是否需要额外的帮助？

如需咨询与产品售后无关的任何其他问题，请联系最近的宜家商店客服中心。我们建议您在联系我们之前仔细阅读设备文档。

中国RoHS

产品中有害物质的名称及含有信息表

部件名称	有害物质									
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBBs)	多溴二苯醚 (PBDEs)	邻苯二甲酸二正丁酯 (DBP)	邻苯二甲酸二异丁酯 (DIBP)	邻苯二甲酸丁苄酯 (BBP)	邻苯二甲酸二(2-乙基)己酯 (DEHP)
变频器	×	○	×	○	○	○	○	○	○	○
触摸屏	×	○	○	○	○	○	○	○	○	○
电机组件	×	○	○	○	○	○	○	○	○	○
电脑板	×	○	×	○	○	○	○	○	○	○
电源线	×	○	○	○	○	○	○	○	○	○
定时器	×	○	×	○	○	○	○	○	○	○
风机组件	×	○	○	○	○	○	○	○	○	○
高压变压器	○	○	×	○	○	○	○	○	○	○
高压二极管组件	×	○	○	○	○	○	○	○	○	○
控制面板组件	×	○	○	○	○	○	○	○	○	○
滤波板组件	×	○	×	○	○	○	○	○	○	○
水泵组件	×	○	○	○	○	○	○	○	○	○
温度、湿度传感器	×	○	○	○	○	○	○	○	○	○
温控器	×	○	×	○	○	○	○	○	○	○
扬声器、蜂鸣器	×	○	○	○	○	○	○	○	○	○
蒸汽发生器	×	○	○	○	○	○	○	○	○	○
灶台板组件	×	○	○	○	○	○	○	○	○	○
烤箱阀体、 电磁阀、喷嘴	×	○	○	○	○	○	○	○	○	○
烤箱一体化灯	×	○	○	○	○	○	○	○	○	○
烤箱门锁	×	○	○	○	○	○	○	○	○	○
烤箱温度探针	×	○	○	○	○	○	○	○	○	○
烤箱接线盒	×	○	○	○	○	○	○	○	○	○
烤箱转换开关	×	○	×	○	○	○	○	○	○	○
烤箱能量调节器	×	○	○	○	○	○	○	○	○	○

- 备注：
- 1. ○:表示该有害物质在该部件所有均质材料中的含量均不超出电器电子产品有害物质限制使用国家标准要求。
 - 2. ×:表示该有害物质至少在该部件的某一均质材料中的含量超出电器电子产品有害物质限制使用国家标准要求。
 - 3. 以上未列出的部件，表明其有害物质含量均不超出电器电子产品有害物质限制使用国家标准要求。
 - 4. 以上清单中所包含零部件依据不同产品型号略有不同。
 - 5. 本产品在正常使用情况下,环保使用期限为15年，建议使用一定年限后更换新机。

- 为了保护环境及人类健康：
- 1. 本产品报废后请将其与生活垃圾分开，报废必须符合当地的垃圾处理规定进行，报废之前，宜切断电源线，使设备无法重新使用，消费者有责任将其送至有资质的回收点；
 - 2. 回收处理中心将通过适当的方法回收再利用产品中的材料；
 - 3. 关于本产品回收处理的详细信息请咨询当地政府、废品处理中心或经销商。

环保清单

食品接触材料信息

请根据说明书要求正常使用本产品。

本产品食品接触用材料及部件符合GB 4806.1、GB 9685以及相应材料食品安全国家标准要求，具体信息如下：

部件名称	部件材质	执行标准	备注
水箱、水箱组件、 水箱、水箱组件、水箱导水管	ABS/PC/PC Tritan/ PP/ABS+PC	GB 4806.7	仅接触水
水箱组件(水管塞)	POM	GB 4806.7	仅接触水
水箱组件(弹簧)	不锈钢 06Cr19Ni10	GB 4806.9	SUS304，仅接触水
浮球	PP+RS9120	GB 4806.7	导水管仅接触水
蒸汽发生器组件（电器件）	铝合金YZAlSi11Cu3/ 不锈钢 06Cr19Ni10	GB 4806.9	仅接触水
厚膜蒸汽发生器组件	PC/POM/PPS/ 不锈钢 06Cr19Ni10/ 高温油涂层/EPDM橡胶/ 硅胶	GB 4806.7/ GB 4806.9/ GB 4806.10/ GB 4806.11/ GB 4806.16	仅接触水
水泵	ABS/PC/POM/橡胶/硅胶	GB 4806.7/ GB 4806.11/ GB 4806.16	仅接触水
排气阀	PPS	GB 4806.7	仅接触水蒸气
波导盖	PP/云母	GB 4806.7/ GB 4806.4	---
门贴	PET	GB 4806.7	---
水箱镶件	PBT	GB 4806.7	仅接触水
蒸汽发生器盖、蒸盘支架	PPS	GB 4806.7	仅接触水
塑料三通管	LCP E130i	GB 4806.7	---
水箱座	50%ABS+50%PC	GB 4806.7	仅接触水
蒸架	PTFE	GB 4806.7	---
烤架、烤轴、烤叉、 烤叉紧固螺钉、温度传感器、 烤盘、腔体	不锈钢 06Cr19Ni10	GB 4806.9	SUS304
发热管	不锈钢 06Cr19Ni10/ 不锈钢 06Cr18Ni11Ti/ 不锈钢GH2132/ 不锈钢06Cr25Ni20	GB 4806.9	---
发热管、碳素管、卤素管、 石墨烯管	石英	GB 4806.5	---
取物夹、烤轴、烤架、 烤叉紧固螺钉、涂层、挂架	钢丝基材+镀铜/镍/铬	GB 4806.9	可选配件，不得接触酸性食品

食品接触材料信息

请根据说明书要求正常使用本产品。

本产品食品接触用材料及部件符合GB 4806.1、GB 9685以及相应材料食品安全国家标准要求，具体信息如下：

部件名称	部件材质	执行标准	备注
内隔板、隔热玻璃	硼硅玻璃/微晶陶瓷	GB 4806.5/ GB 4806.4	---
腔体、门体、发热管罩	不锈钢 10Cr17	GB 4806.9	SUS430
门体、腔体基材/涂层	电镀锌钢板基材/ 环氧聚酯涂层 冷轧钢板基材/ 环氧聚酯涂层 热镀锌钢板基材/ 环氧聚酯涂层 热镀锌钢板基材/ 高温有机硅涂层 不锈钢10Cr17基材/ 高温有机硅涂层 不锈钢06Cr19Ni10基材/ 高温有机硅涂层 镀铝板基材/高温有机硅涂层	GB 4806.9/ GB 4806.10	不得接触酸性食品
腔体基材/涂层、 烤盘基材/涂层	搪瓷钢板基材/搪瓷涂层	GB 4806.9/ GB 4806.3	烤盘为可选配件
烤盘基材/涂层	铝合金/特氟龙涂层 镀铝板/高温油涂层 铝合金/陶瓷油涂层	GB 4806.9/ GB 4806.10	可选配件
蒸汽发生器组件（水管）、 进水管、出水管、 密封圈(水箱、腔体）、 门体滴胶	硅胶	GB 4806.16	蒸汽发生器组件（水管）为可选配件， 蒸汽发生器组件（水管）、进水管、 出水管仅接触水
蒸汽发生器组件（盖）	陶瓷	GB 4806.4	仅接触水

备注：

- 1. 所列部品为可能接触食物部品，不宜作为容器长期存储食品。
- 2. 表格中包含了本公司生产的此类产品的全部部件，不同型号的产品会使用上述部分或者全部的材料及部件，具体以实物为准，若上述法规或标准更新，本声明默认符合最新版本的要求，具体证明文件以最新的检测报告为准。

